

SERVICE MANUAL

DATSUN 240Z SPORTS
MODEL S30 SERIES
CHASSIS & BODY



NISSAN MOTOR CO., LTD.
TOKYO, JAPAN

SECTION ER

ENGINE REMOVAL & INSTALLATION

ER

ENGINE REMOVAL AND ER- 1
INSTALLATION

FRONT ENGINE MOUNTING ER- 3
INSULATOR

REAR ENGINE MOUNTING ER- 3
INSULATOR

ENGINE REMOVAL & INSTALLATION

ENGINE REMOVAL AND INSTALLATION

CONTENTS

REMOVAL ER-1

INSTALLATION ER-3

Experience has shown that it is much easier to remove the engine with transmission as a single unit than to remove the engine only.

The engine can then be separated from the transmission assembly.

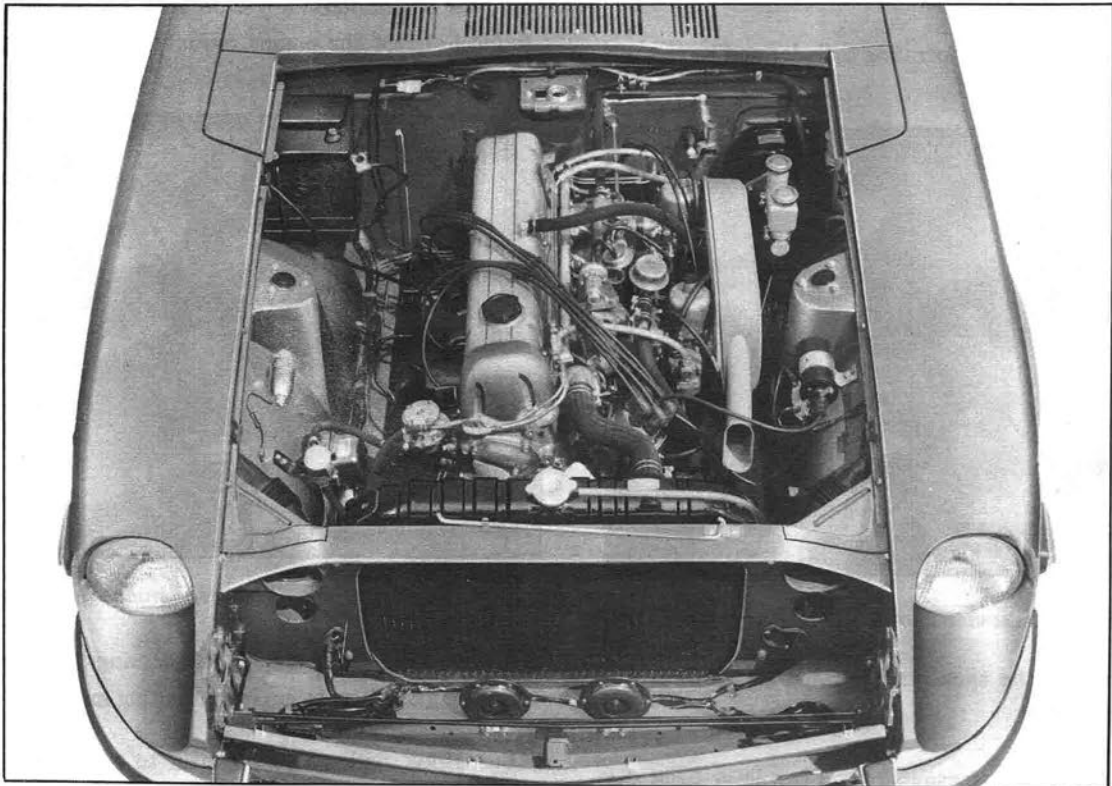


Fig. ER-1 Engine compartment

REMOVAL

1. Scribe alignment marks on hood around hood hinges and remove hood from hinges.
2. Completely drain the cooling system, engine and transmission lubricant.
3. Disconnect the battery cable.
4. Take off both upper and lower radiator hoses by removing the hose clamps. Then loosen the fixing bolts of the radiator, and take it out in sequence.

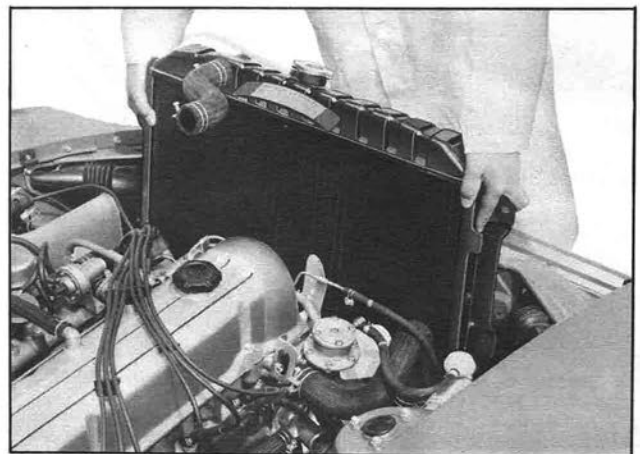


Fig. ER-2 Removing radiator

CHASSIS

5. Disconnect the fuel tube from the fuel pump.
6. If equipped with heater, remove its hoses at engine attachment.
7. Disconnect master vac vacuum hose from engine.
8. Disconnect accelerator control linkage, throttle control wire and choke control wire at the carburetor side.
9. Disconnect the wirings for the starter, alternator, ignition coil, oil pressure switch and thermal transmitter.
10. Remove the clutch operating cylinder and its return spring.

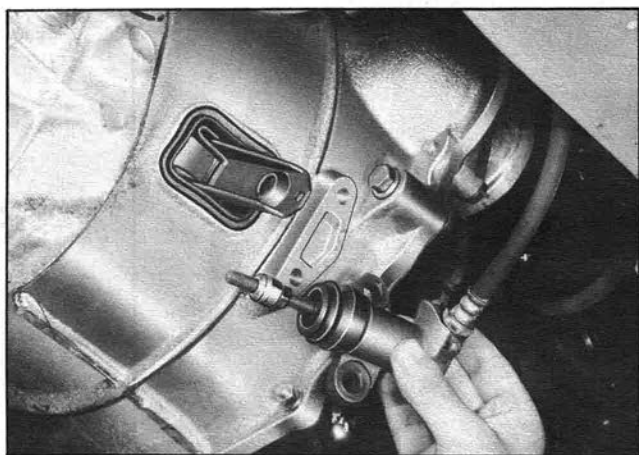


Fig. ER-3 Removing clutch operating cylinder

11. Disconnect the speedometer cable. Disconnect the reverse lamp switch.
12. Disconnect the transmission control lever from the control lever bracket, and remove the control lever.

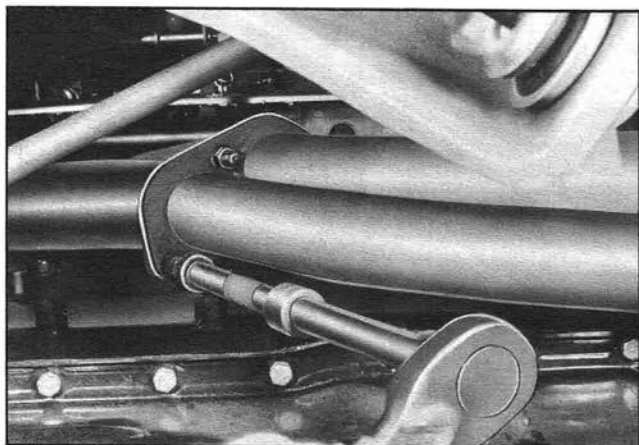


Fig. RE-4 Disconnecting exhaust tube

13. Disconnect the front exhaust tube from the exhaust manifold.
14. Disconnect the center tube from the main muffler and remove the front tube, pre-muffler and center tube assembly.
15. Disconnect the propeller shaft by disconnecting it from the companion flange of the gear carrier.
16. Jack up the transmission a little and then remove the rear engine mounting cross member by removing the fixing bolts of the engine mounting insulator, mounting cross member.

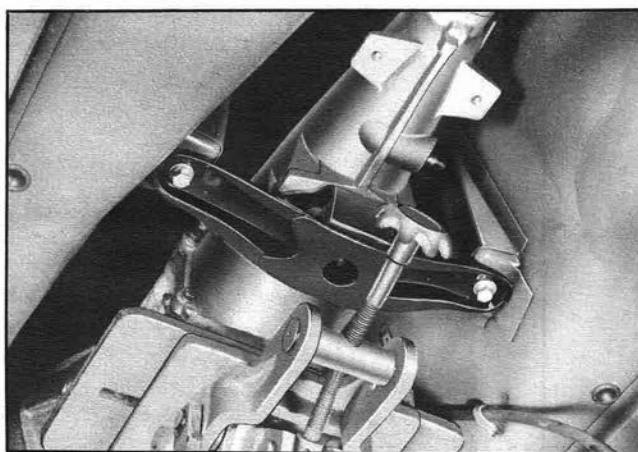


Fig. ER-5 Removing rear engine mounting

17. Remove the fixing bolts securing the front engine mounting brackets to engine mounting insulators.
18. Hook with cable or chain to the slingers (hooks) which are installed on the engine cylinder head one at the front and the other at the rear.

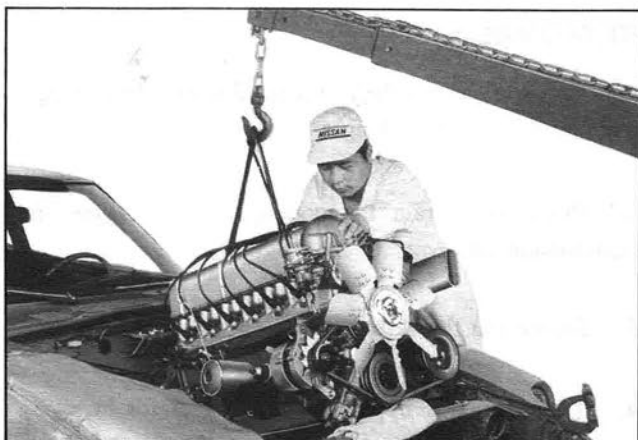


Fig. ER-6 Lifting engine

ENGINE REMOVAL & INSTALLATION

At this lifting, lower the jack placed under the transmission gradually (draw off the jack at adequate stage), hoist up engine observing the tension of wire and adjusting the position of chain block so that the engine tilts in order to make it cleared off the body. At this lifting, take care that accessories installed on the body side do not touch the engine and transmission.

INSTALLATION

Reverse the removal procedure but do not connect any parts to the engine steadily until the engine mounting insulators have been replaced and the power unit weight is taken by them.

FRONT ENGINE MOUNTING INSULATOR

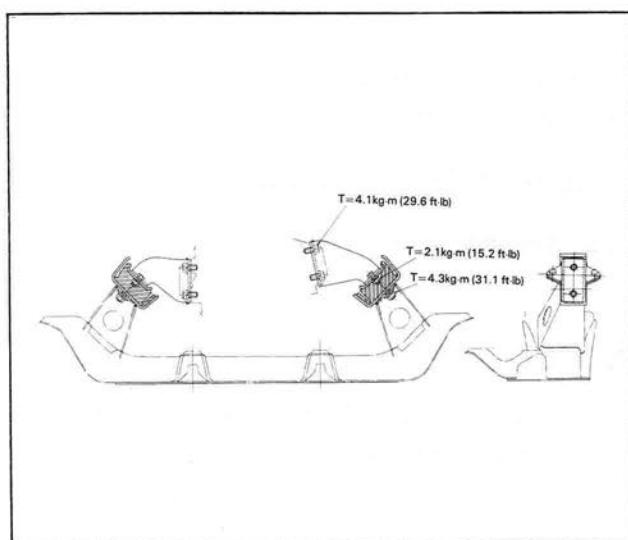


Fig. ER-7 Sectional view of front engine mounting

REMOVAL AND INSTALLATION

1. Support the engine weight by a jack.
2. Remove the nut connecting the front engine mounting insulator and the front suspension member. Remove the bolts connecting the engine mounting insulator and the engine mounting bracket.

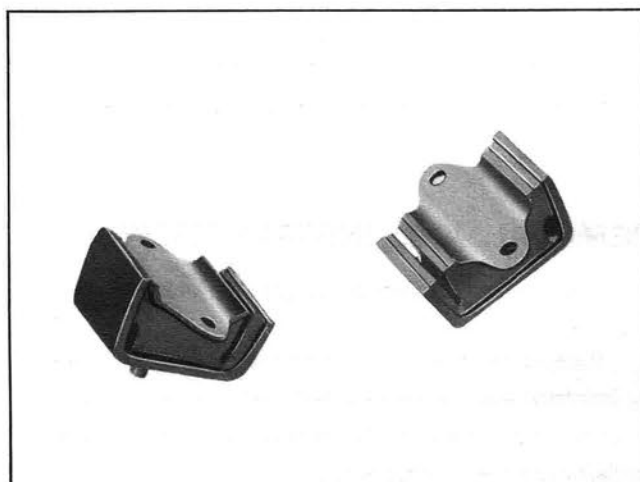


Fig. ER-8 Front engine mounting insulator

3. Jack up the engine a little and remove the insulator.
4. Reverse the removal procedure.

Note: Keep the insulator free from Oil or Grease.

INSPECTION

If there is damage, deterioration, or separation of bonded surface, renew the parts.

REAR ENGINE MOUNTING INSULATOR

CONTENTS

REMOVAL AND INSTALLATION ER-4

INSPECTION ER-4

CHASSIS

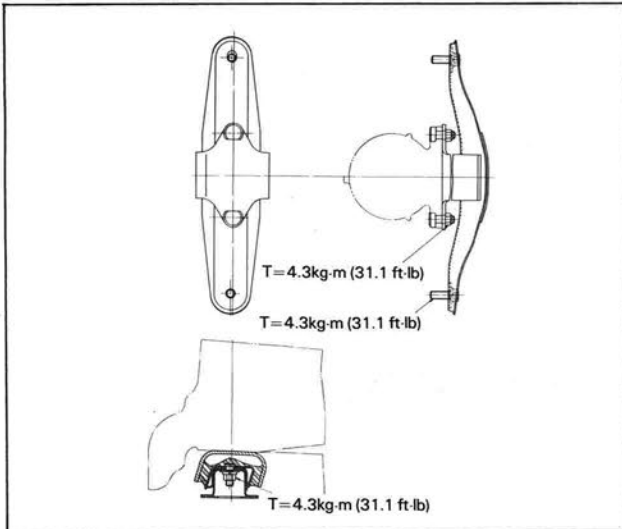


Fig. ER-9 Sectional view of rear engine mounting

REMOVAL AND INSTALLATION

1. Support the transmission weight by a jack.
2. Remove the bolts connecting the rear engine mounting insulator and the transmission rear extension housing. Remove the fixing bolts connecting the mounting insulator and the cross member.



Fig. ER-10 Rear engine mounting

3. Remove the bolts fixing the cross member to under the body. Then remove the insulator.
4. Reverse the removal procedure.

Note: Keep the insulator free from Oil or Grease.

INSPECTION

If there is damage, deterioration, or separation of bonded surface, renew the parts.

SERVICE JOURNAL OR BULLETIN REFERENCE

DATE	JOURNAL or BULLETIN No.	PAGE No.	SUBJECT

SERVICE JOURNAL OR BULLETIN REFERENCE[illegible]

CHASSIS

SERVICE JOURNAL OR BULLETIN REFERENCE[illegible]